

# 3-in-1 Bar Gauge Assembly Instructions

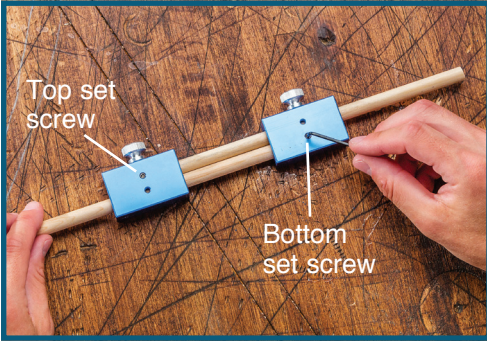


Fig. 1

Cut your own 3/8" dowels/rods to size before you start. We recommend aluminum rods.

**Note:** Some wood dowels might require slight sanding to fit.

1. Insert the dowels/rods into the gauge bodies and tighten the set screws with the 2mm hex wrench on the top and bottom. **Fig. 1.**
2. Attach the tip you want to use and tighten the set screw with the 3.5mm hex wrench. **Fig. 2.**
3. Loosen the lock knobs and adjust length by sliding bar gauge bodies. **Fig. 3.**
4. Tighten the lock knobs when desired length is reached. **Fig. 4.**

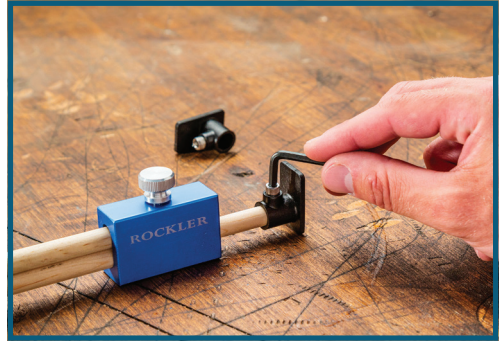


Fig. 2

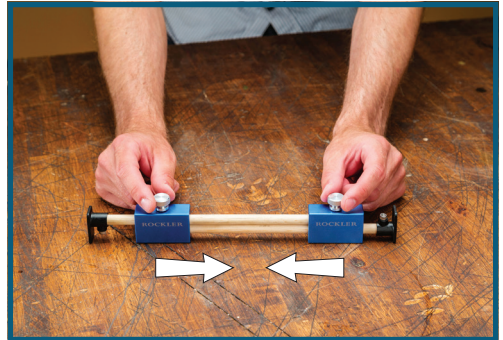


Fig. 3



Fig. 4

53052  
Rev 07/14

 Visit [Rockler.com](http://Rockler.com) for the most current product information and videos or call 1-800-260-9663.

 **ROCKLER**  
WOODWORKING AND HARDWARE

Create with Confidence™  
© Rockler Companies Inc. 2014